

# Tectum &Murus®

MEMBER OF ENTERIJER MASSIV


Enterijer MASSIV  
Ritska 62a , 26000 Pančevo  
Republika Srbija  
tel: +381 65 2009 500  
web: www.tectum-murus.com




## Model: Tectum T1

### Korak 1. / Step 1.

Elementi za instalaciju / Installation elements

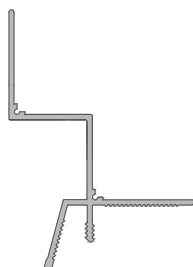


Tectum T1 profil  
L=2000mm

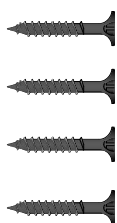

Šrafovi / Screws  
-nisu uključeni/ not included-

### Korak 2. / Step 2.

Merenje / Measurement

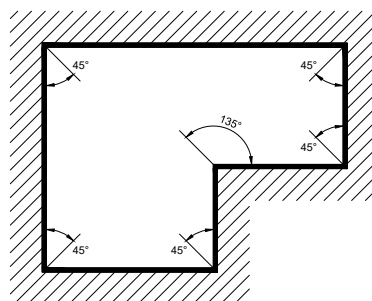


1. Obeležiti liniju sečenja i označiti na zidu gde će profil biti montiran / Measure cutout and mark drywall where the profile will be mounted.

2. Profil se u čoškovima spaja pod uglom od 45° / The profile is joined in the corners at an angle of 45°.

### Korak 3. / Step 3.

Merenje / Measurement

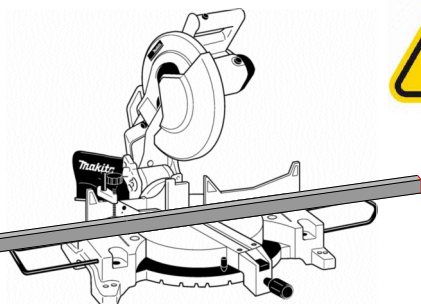


1. Upozorenje! Koristiti opremu za ličnu zaštitu i atestirane uređaje. / Attention! Use equipment for personal protection and certified devices.

2. Ukrajanje se vrši pomoću ger testere sa sečivom namenjenim za aluminijum. / Trimming is done using a miter saw with a blade designed for aluminum.

### Korak 4. / Step 4.


Instalacija / Installation

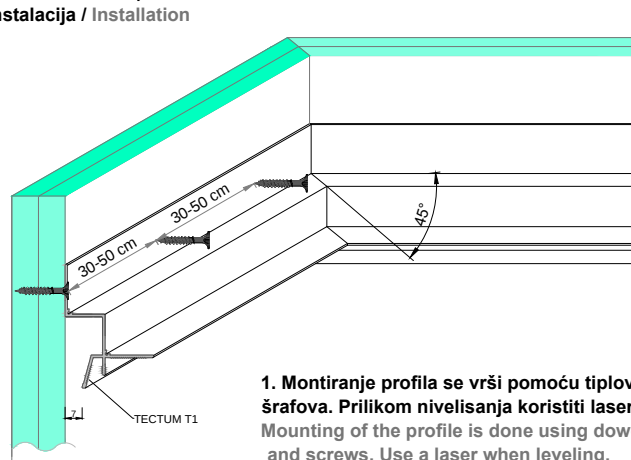

1. Montiranje profila se vrši pomoću tiplova i šrafova. Prilikom nivelisanja koristiti laser. / Mounting of the profile is done using dowels and screws. Use a laser when leveling.

### Korak 5. / Step 5.


Instalacija gips garton ploča / Installation gypsum board

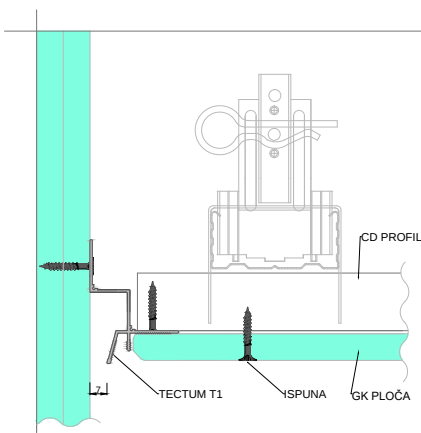

1. Nakon postavljanja profila, izvršiti postavljanje čeličnih profila i ugradnju gips-karton ploča. / After the installation of the profile, complete the installation of the steel profiles and the installation of gypsum board.

### Korak 6. / Step 6.

Obrada spoja/ Connection processing

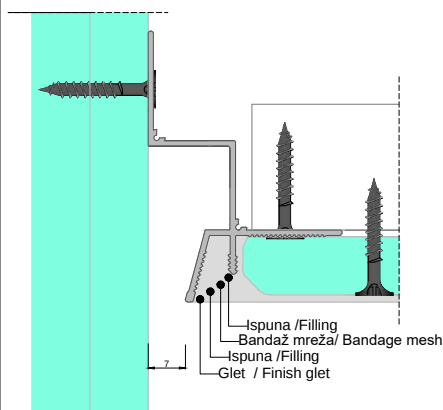

1. Naneti ispunu u tankom sloju direktno na aluminijumski deo profila, nakon toga postaviti bandaž traku sa ponovnim nanošenjem ispunu. / Apply the filling in a thin layer directly on the aluminum part of the profile, after of which a bandage tape with repeated by applying the filling.

2. Završno gletovanje x 2. / Finish glet x 2.

# Tectum &Murus®

MEMBER OF ENTERIJER MASSIV


Enterijer MASSIV  
Ritska 62a , 26000 Pančevo  
Republika Srbija  
tel: +381 65 2009 500  
web: www.tectum-murus.com



## Model: Tectum T2

### Korak 1. / Step 1.


Elementi za instalaciju / Installation elements

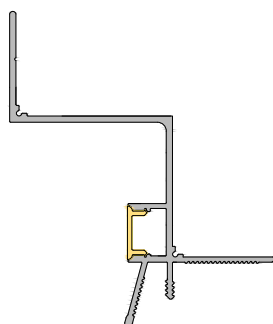

Tectum T3 profil  
L=2000mm




LED difusor  
L=2000mm

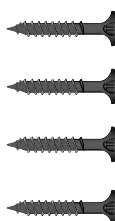

Šrafovi / Screws  
-nisu uključeni/ not included-

### Korak 2. / Step 2.

Merenje / Measurement

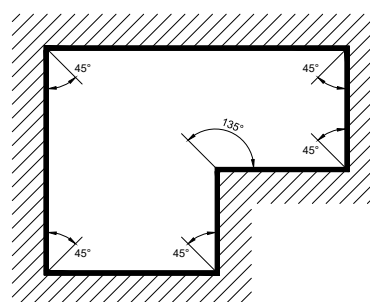


1. Obeležiti liniju sečenja i označiti na zidu gde će profil biti montiran / Measure cutout and mark drywall where the profile will be mounted.

2. Profil se u ćoškovima spaja pod uglom od 45° / The profile is joined in the corners at an angle of 45°.

### Korak 3. / Step 3.

Merenje / Measurement

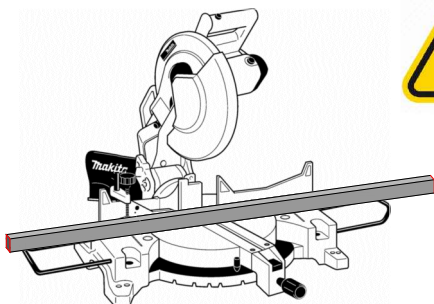


1. Upozorenje! Koristiti opremu za ličnu zaštitu i atestirane uređaje. / Attention! Use equipment for personal protection and certified devices.

2. Ukrajanje se vrši pomoću ger testere sa sečivom namenjenim za aluminijum. / Trimming is done using a miter saw with a blade designed for aluminum.

### Korak 4. / Step 4.


Instalacija / Installation

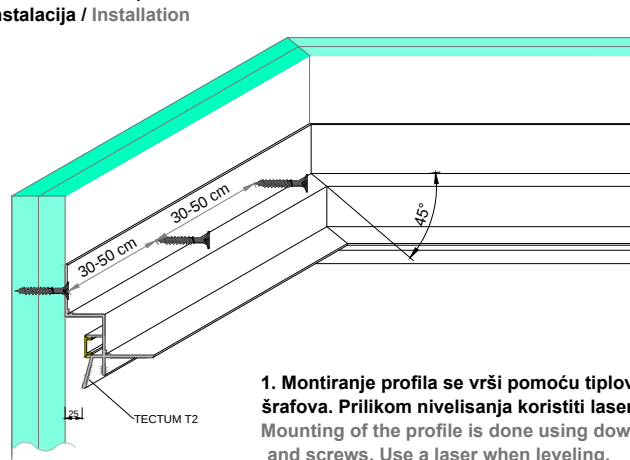

1. Montiranje profila se vrši pomoću tiplova i šrafova. Prilikom nivelisanja koristiti laser. / Mounting of the profile is done using dowels and screws. Use a laser when leveling.

### Korak 5. / Step 5.


Instalacija gips garton ploča / Installation gypsum board

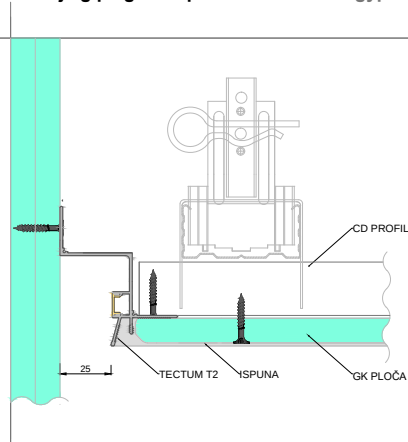

1. Nakon postavljanja profila, izvršiti postavljanje čeličnih profila i ugradnju gips-karton ploča. / After the installation of the profile, complete the installation of the steel profiles and the installation of gypsum board.

### Korak 6. / Step 6.

Obrada spoja/ Connection processing

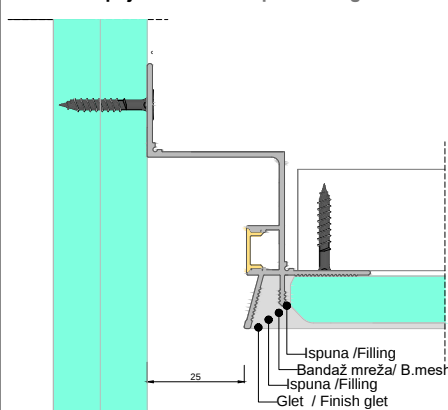


1. Naneti ispunu u tankom sloju direktno na aluminijumski deo profila, nakon toga postaviti bandaż traku sa ponovnim nanošenjem ispunu. / Apply the filling in a thin layer directly on the aluminum part of the profile, after of which a bandage tape with repeated by applying the filling.

2. Završno gletovanje x 2. / Finish glet x 2.

# Tectum &Murus®

MEMBER OF ENTERIJER MASSIV


Enterijer MASSIV  
Ritska 62a , 26000 Pančevo  
Republika Srbija  
tel: +381 65 2009 500  
web: www.tectum-murus.com

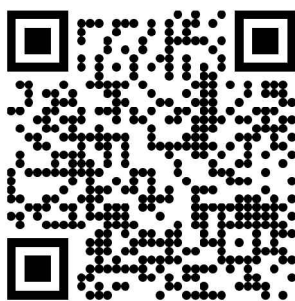


## Model: Tectum T3

### Korak 1. / Step 1.

Elementi za instalaciju / Installation elements




Tectum T3 profil  
L=2000mm



Šrafovi / Screws  
-nisu uključeni/ not included-

### Korak 2. / Step 2.

Merenje / Measurement

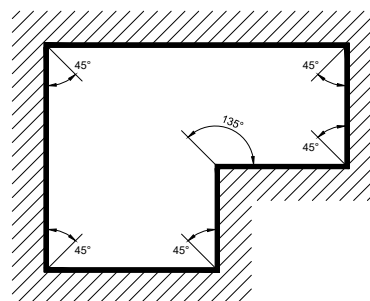


1. Obeležiti liniju sečenja i označiti na zidu gde će profil biti montiran / Measure cutout and mark drywall where the profile will be mounted.

2. Profil se u čoškovima spaja pod uglom od 45° / The profile is joined in the corners at an angle of 45°.

### Korak 3. / Step 3.

Merenje / Measurement

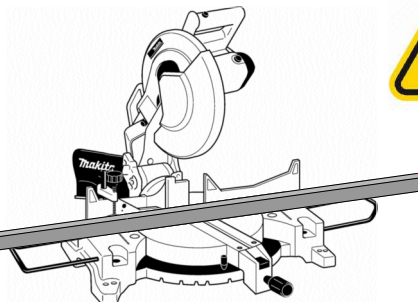


1. Upozorenje! Koristiti opremu za ličnu zaštitu i atestirane uređaje. / Attention! Use equipment for personal protection and certified devices.

2. Ukrajanje se vrši pomoću ger testere sa sečivom namenjenim za aluminijum. / Trimming is done using a miter saw with a blade designed for aluminum.

### Korak 4. / Step 4.


Instalacija / Installation

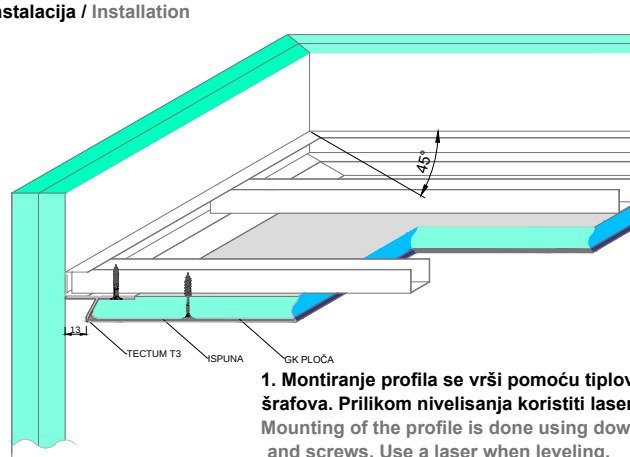

1. Montiranje profila se vrši pomoću tiplova i šrafova. Prilikom nivelisanja koristiti laser. / Mounting of the profile is done using dowels and screws. Use a laser when leveling.

### Korak 5. / Step 5.


Instalacija gips garton ploča / Installation gypsum board

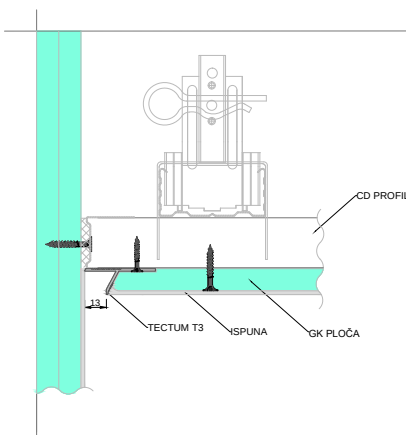

1. Nakon postavljanja profila, izvršiti postavljanje čeličnih profila i ugradnju gips-karton ploča. / After the installation of the profile, complete the installation of the steel profiles and the installation of gypsum board.

### Korak 6. / Step 6.

Obrada spoja/ Connection processing

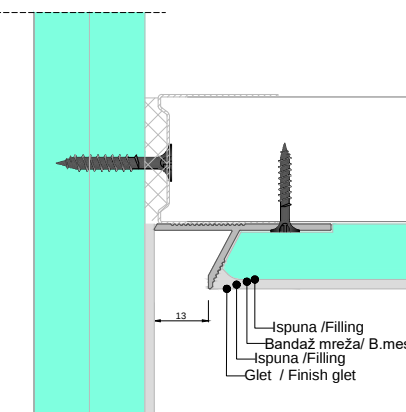

1. Naneti ispunu u tankom sloju direktno na aluminijumski deo profila, nakon toga postaviti bandaż traku sa ponovnim nanošenjem ispune. / Apply the filling in a thin layer directly on the aluminum part of the profile, after of which a bandage tape with repeated by applying the filling.

2. Završno gletovanje x 2. / Finish glet x 2.

# Tectum &Murus®

MEMBER OF ENTERIJER MASSIV


Enterijer MASSIV  
Ritska 62a , 26000 Pančevo  
Republika Srbija  
tel: +381 65 2009 500  
web: www.tectum-murus.com




## Model: Murus H1

### Korak 1. / Step 1.

Elementi za instalaciju / Installation elements




Murus H1 profil  
L=2000mm



Šrafovi / Screws  
-nisu uključeni/ not included-

### Korak 2. / Step 2.

Merenje / Measurement

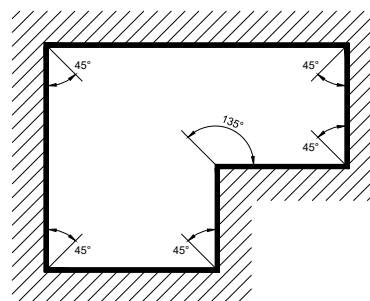


1. Obeležiti liniju sečenja i označiti na zidu gde će profil biti montiran / Measure cutout and mark drywall where the profile will be mounted.

2. Profil se u ćoškovima spaja pod uglom od 45° / The profile is joined in the corners at an angle of 45°.

### Korak 3. / Step 3.

Merenje / Measurement

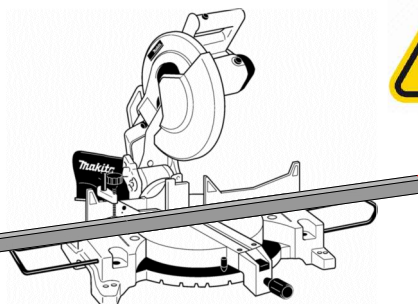


1. Upozorenje! Koristiti opremu za ličnu zaštitu i atestirane uređaje. / Attention! Use equipment for personal protection and certified devices.

2. Ukrajanje se vrši pomoću ger testere sa sečivom namenjenim za aluminijum. / Trimming is done using a miter saw with a blade designed for aluminum.

### Korak 4. / Step 4.


Instalacija / Installation

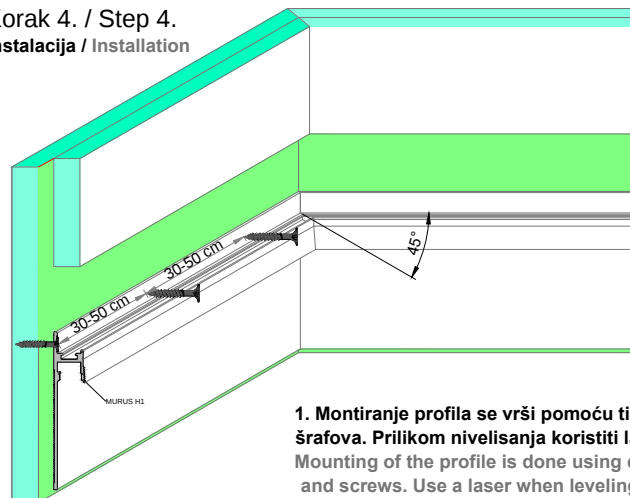

1. Montiranje profila se vrši pomoću tiplova i šrafova. Prilikom nivelisanja koristiti laser. / Mounting of the profile is done using dowels and screws. Use a laser when leveling.

### Korak 5. / Step 5.


Instalacija gips garton ploča / Installation gypsum board

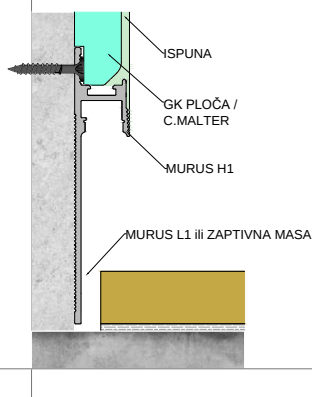

1. Nakon postavljanja čeličnih profila, izvršiti postavljanje Tetum T1 profila i ugraditi gips-karton ploču. / After installing the steel profiles, install the Tetum T1 profile and the installation of gypsum board.

### Korak 6. / Step 6.

Obrađivanje spoja / Connection processing

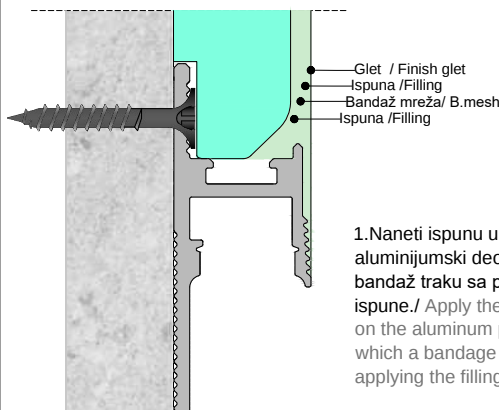


1. Naneti ispunu u tankom sloju direktno na aluminijumski deo profila, nakon toga postaviti bandaž traku sa ponovnim nanošenjem ispunu. / Apply the filling in a thin layer directly on the aluminum part of the profile, after which a bandage tape with repeated applying the filling.

2. Završno gletovanje x 2 / Finish glet x 2.

# Tectum &Murus®

MEMBER OF ENTERIJER MASSIV


Enterijer MASSIV  
Ritska 62a , 26000 Pančevo  
Republika Srbija  
tel: +381 65 2009 500  
web: www.tectum-murus.com

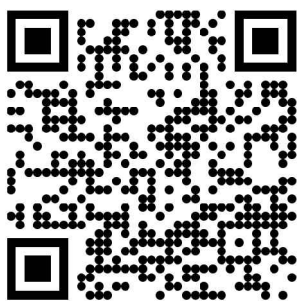

## Model: Murus H2 i Murus H3

### Korak 1. / Step 1.

Elementi za instalaciju / Installation elements



Murus H1 profil  
L=2000mm




LED difusor  
L=2000mm



Šrafovi / Screws  
-nisu uključeni/ not included-

### Korak 2. / Step 2.

Merenje / Measurement

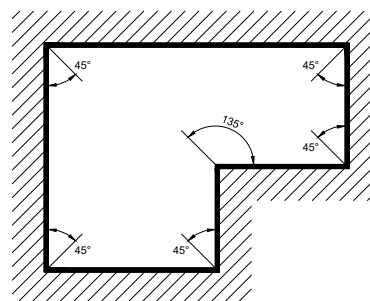


1. Obeležiti liniju sečenja i označiti na zidu gde će profil biti montiran / Measure cutout and mark drywall where the profile will be mounted.

2. Profil se u ćoškovima spaja pod uglom od 45° / The profile is joined in the corners at an angle of 45°.

### Korak 3. / Step 3.

Merenje / Measurement

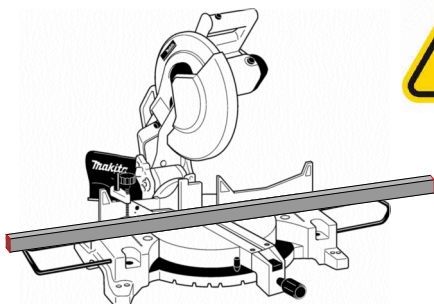


1. Upozorenje! Koristiti opremu za ličnu zaštitu i atestirane uređaje. / Attention! Use equipment for personal protection and certified devices.

2. Ukrajanje se vrši pomoću ger testere sa sečivom namenjenim za aluminijum. / Trimming is done using a miter saw with a blade designed for aluminum.

### Korak 4. / Step 4.


Instalacija / Installation

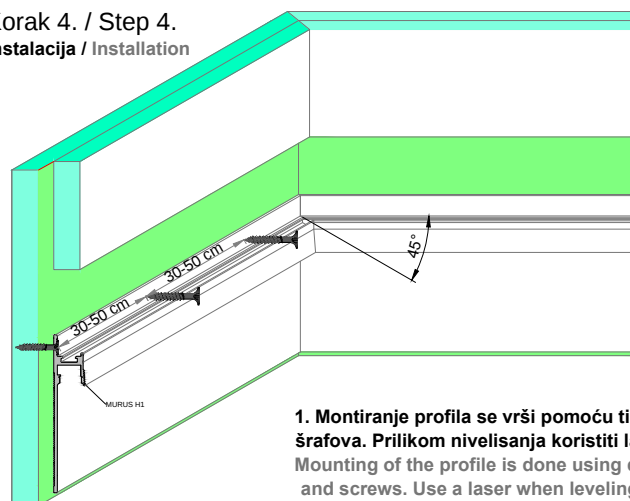

1. Montiranje profila se vrši pomoću tiplova i šrafova. Prilikom nivelisanja koristiti laser. / Mounting of the profile is done using dowels and screws. Use a laser when leveling.

### Korak 5. / Step 5.


Instalacija gips garton ploča / Installation gypsum board

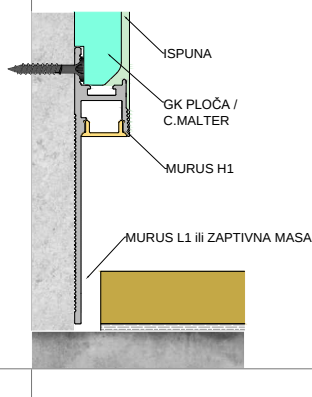

1. Nakon postavljanja čeličnih profila, izvršiti postavljanje Tetum T2 profila i ugraditi gips-karton ploču. / After installing the steel profiles, install the Tetum T1 profile and the installation of gypsum board.

### Korak 6. / Step 6.

Obrada spoja/ Connection processing

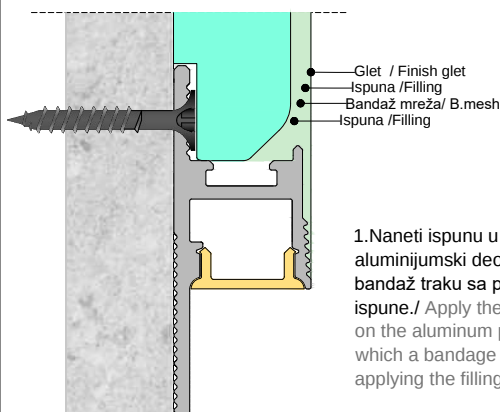


1. Naneti ispunu u tankom sloju direktno na aluminijumski deo profila, nakon toga postaviti bandaž traku sa ponovnim nanošenjem ispunu. / Apply the filling in a thin layer directly on the aluminum part of the profile, after which a bandage tape with repeated applying the filling.

2. Završno gletovanje x 2/ Finish glet x 2.

# Tectum &Murus®

MEMBER OF ENTERIJER MASSIV


Enterijer MASSIV  
Ritska 62a , 26000 Pančevo  
Republika Srbija  
tel: +381 65 2009 500  
web: www.tectum-murus.com

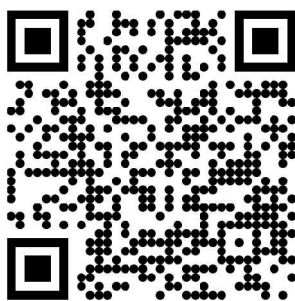

## Model: Murus L1

### Korak 1. / Step 1.

Elementi za instalaciju / Installation elements

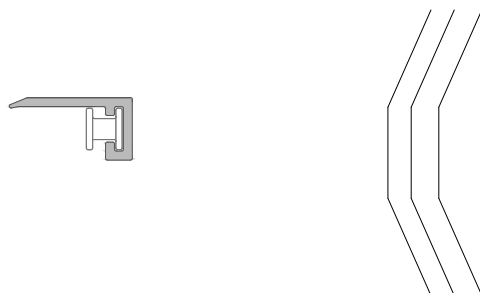


Murus L1 profil  
L=2000mm

Opruga 3 kom/  
Spring 3 pcs.

### Korak 2. / Step 2.

Merenje / Measurement

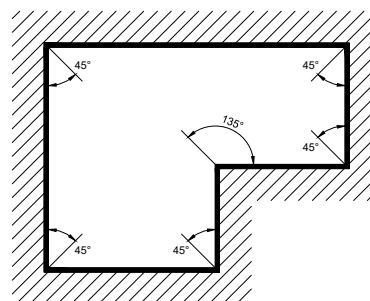


1. Obeležiti liniju sečenja i označiti na zidu gde će profil biti montiran / Measure cutout and mark drywall where the profile will be mounted.

2. Profil se u ćoškovima spaja pod uglom od 45° / The profile is joined in the corners at an angle of 45°.

### Korak 3. / Step 3.

Merenje / Measurement

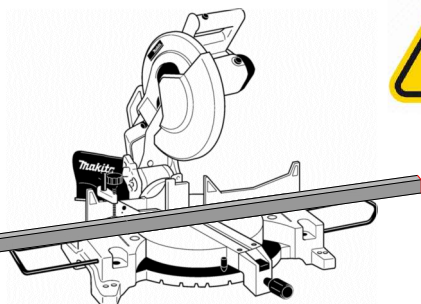


1. Upozorenje! Koristiti opremu za ličnu zaštitu i atestirane uređaje. / Attention! Use equipment for personal protection and certified devices.

2. Ukrajanje se vrši pomoću ger testere sa sečivom namenjenim za aluminijum. / Trimming is done using a miter saw with a blade designed for aluminum.

### Korak 4. / Step 4.


Instalacija / Installation

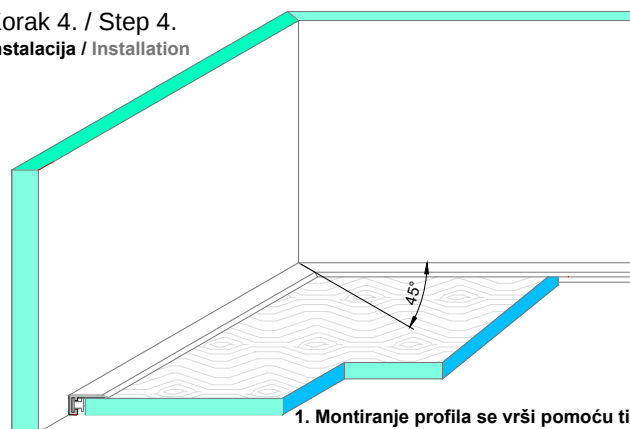

1. Montiranje profila se vrši pomoću tiplova i šrafova. Prilikom nivelisanja koristiti laser. / Mounting of the profile is done using dowels and screws. Use a laser when leveling.

### Korak 5. / Step 5.


Instalacija gips garton ploča / Installation gypsum board

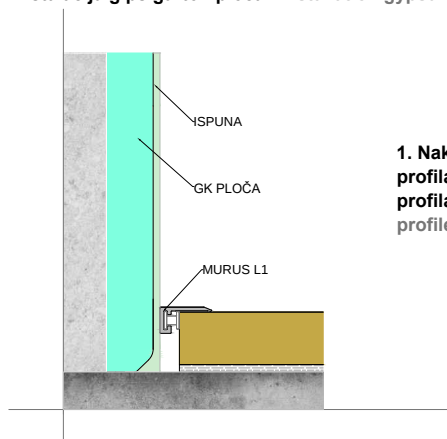

1. Nakon postavljanja čeličnih profila, izvršiti postavljanje Murus L1 profila. / After installing the steel profiles, install the Murus L1 profile.

### Korak 6. / Step 6.

Obrada spoja / Connection processing

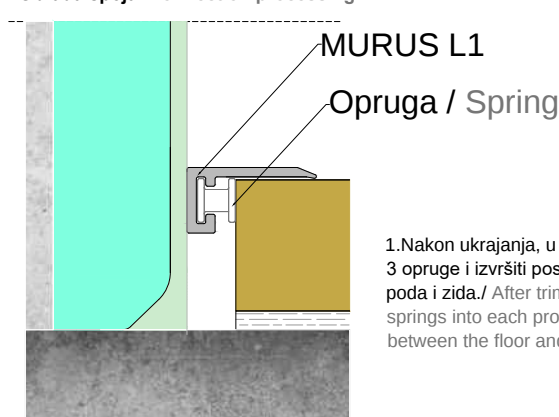

1. Nakon ukrajanja, u svaki profil ubaciti po 3 opruge i izvršiti postavljanje između poda i zida. / After trimming, insert 3 springs into each profile and place them between the floor and the wall.

# Tectum &Murus®

MEMBER OF ENTERIJER MASSIV


Enterijer MASSIV  
Ritska 62a , 26000 Pančevo  
Republika Srbija  
tel: +381 65 2009 500  
web: www.tectum-murus.com




## Model: Murus L2

### Korak 1. / Step 1.

Elementi za instalaciju / Installation elements




Murus L2 profil  
L=2000mm



Opruga 3 kom/  
Spring 3 pcs.

### Korak 2. / Step 2.

Merenje / Measurement

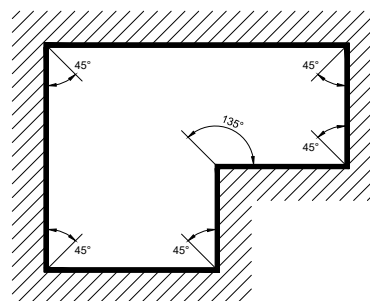


1. Obeležiti liniju sečenja i označiti na zidu gde će profil biti montiran / Measure cutout and mark drywall where the profile will be mounted.

2. Profil se u ćoškovima spaja pod uglom od 45° / The profile is joined in the corners at an angle of 45°.

### Korak 3. / Step 3.

Merenje / Measurement

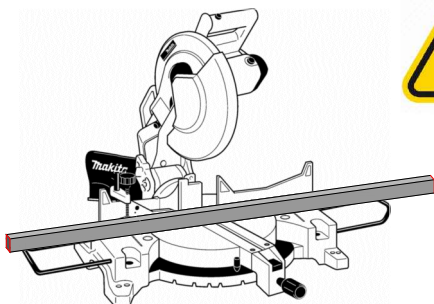


1. Upozorenje! Koristiti opremu za ličnu zaštitu i atestirane uređaje. / Attention! Use equipment for personal protection and certified devices.

2. Ukrajanje se vrši pomoću ger testere sa sečivom namenjenim za aluminijum. / Trimming is done using a miter saw with a blade designed for aluminum.

### Korak 4. / Step 4.


Instalacija / Installation

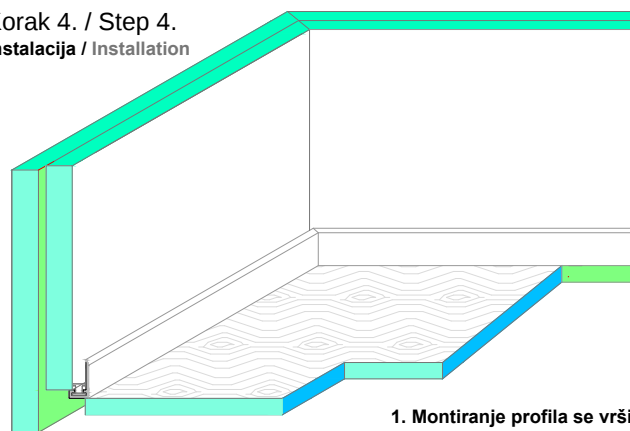

1. Montiranje profila se vrši putem opruga. / Mounting of the profile is done by means of springs.

### Korak 5. / Step 5.


Instalacija gips garton ploča / Installation gypsum board

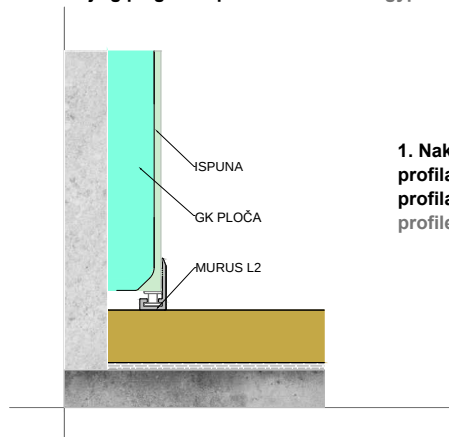

1. Nakon postavljanja čeličnih profila, izvršiti postavljanje Murus L1 profila. / After installing the steel profiles, install the Murus L1 profile.

### Korak 6. / Step 6.

Obrada spoja / Connection processing

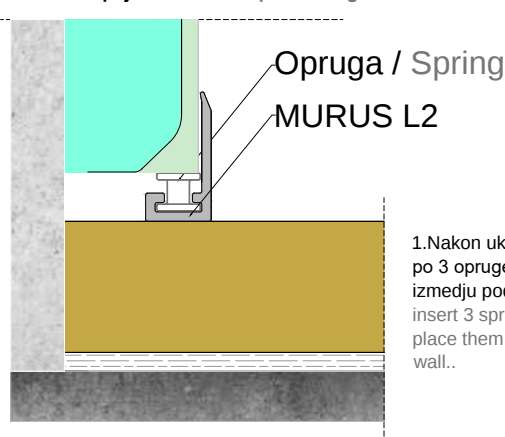


1. Nakon ukrajanja, u svaki profil ubaciti po 3 opruge i izvršiti postavljanje između poda i zida. / After trimming, insert 3 springs into each profile and place them between the floor and the wall..

# Tectum &Murus®

MEMBER OF ENTERIJER MASSIV


Enterijer MASSIV  
Ritska 62a , 26000 Pančevo  
Republika Srbija  
tel: +381 65 2009 500  
web: www.tectum-murus.com

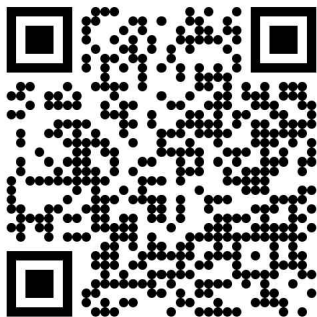


## Model: Murus L3

### Korak 1. / Step 1.

Elementi za instalaciju / Installation elements

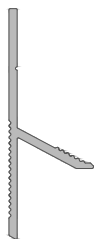


Murus L3 profil  
L=2000mm

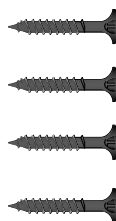

Šrafovi / Screws  
-nisu uključeni/ not included-

### Korak 2. / Step 2.

Merenje / Measurement

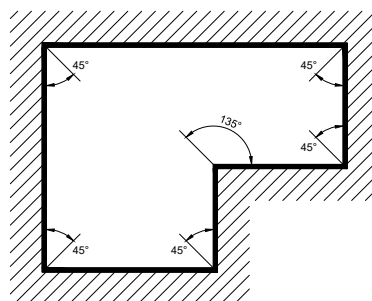


1. Obeležiti liniju sečenja i označiti na zidu gde će profil biti montiran / Measure cutout and mark drywall where the profile will be mounted.

2. Profil se u ćoškovima spaja pod uglom od 45° / The profile is joined in the corners at an angle of 45°.

### Korak 3. / Step 3.

Merenje / Measurement

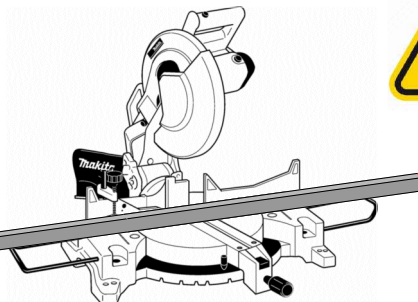


1. Upozorenje! Koristiti opremu za ličnu zaštitu i atestirane uređaje. / Attention! Use equipment for personal protection and certified devices.

2. Ukrajanje se vrši pomoću ger testere sa sečivom namenjenim za aluminijum. / Trimming is done using a miter saw with a blade designed for aluminum.

### Korak 4. / Step 4.


Instalacija / Installation

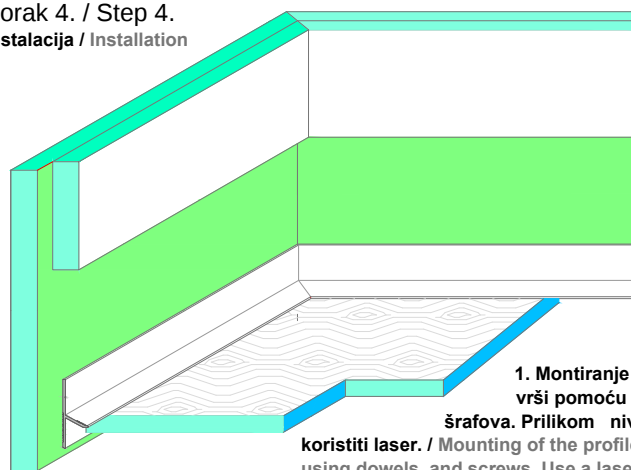

1. Montiranje profila se vrši pomoću tiplova i šrafova. Prilikom nivelisanja koristiti laser. / Mounting of the profile is done using dowels and screws. Use a laser when leveling.

### Korak 5. / Step 5.


Instalacija gips garton ploča / Installation gypsum board

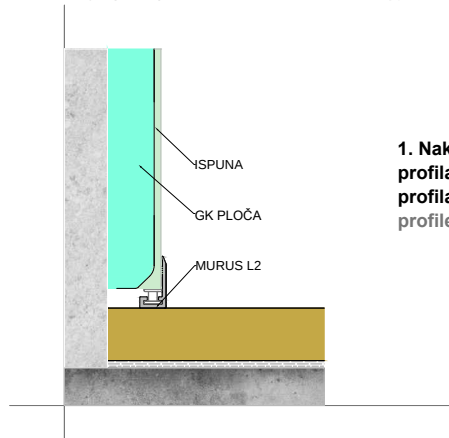

1. Nakon postavljanja čeličnih profila, izvršiti postavljanje Murus L1 profila. / After installing the steel profiles, install the Murus L1 profile.

### Korak 6. / Step 6.

Obrada spoja/ Connection processing

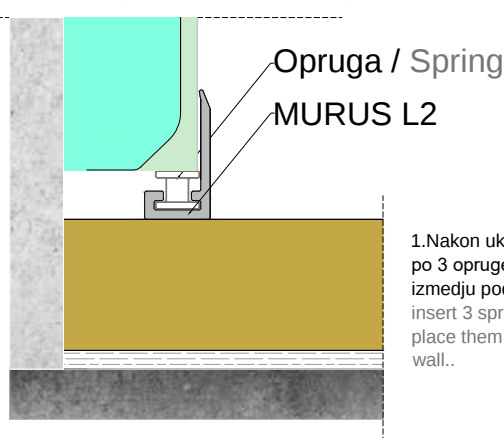

1. Nakon ukrajanja, u svaki profil ubaciti po 3 opruge i izvršiti postavljanje između poda i zida. / After trimming, insert 3 springs into each profile and place them between the floor and the wall..